

# Assembly Instructions

ITEM NUMBER - PA2003


## Hardware



Rawl Plug x 1 Pc


### Step-1

Drill a approx.3.5cm hole into wall.

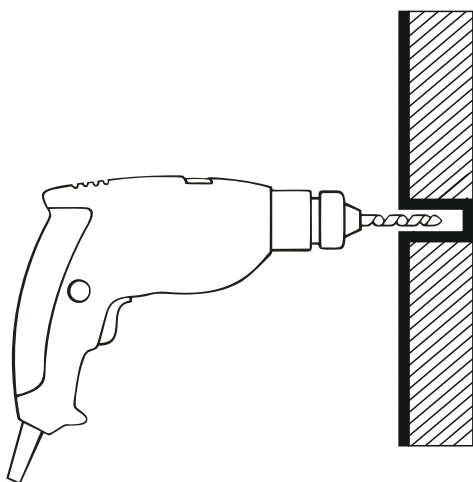


### Step-2

Hammer rawl plug into wall untill flush (level) with wall.

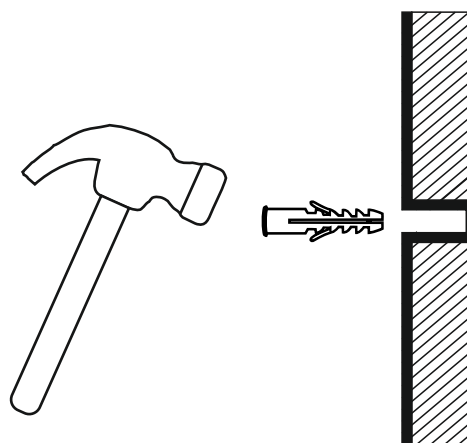

### Step-3

Screw hook into rawl plug.

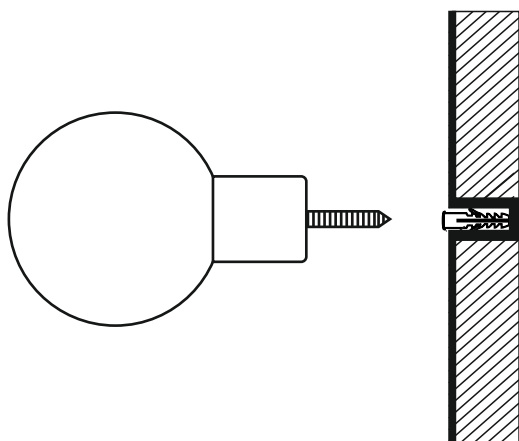

### Step - 4

The installation is completed.

